


# INTERNAL DOOR - How to Measure a Door

SECTION VIEW

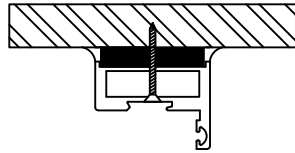

MEASURE TIGHT OPENING HEIGHT

## HEIGHT

### Measure your opening

We require the TIGHT OPENING HEIGHT . From Finished Floor Level, to underside of structure


Please use the TIGHT OPENING HEIGHT when ordering your Fineline door.

NOTE - Fineline will deduct an installation tolerance of 5mm in the frame height. Your door frame will sit on Finished Floor Level (5mm gap at head). The door leaf will sit 8mm above the bottom of the door frame.

F.F.L



PLAN VIEW

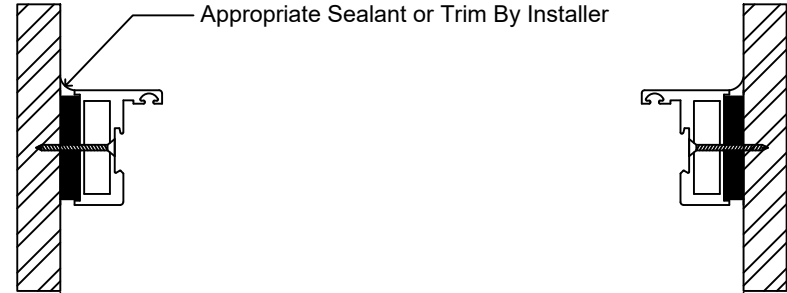

MEASURE TIGHT OPENING WIDTH

## WIDTH

### Measure your opening

We require the TIGHT OPENING WIDTH. Measure the tight opening width in 3 places (Top, middle and bottom).

Please use the TIGHT OPENING WIDTH when ordering your Fineline door.

NOTE - Fineline will deduct an installation tolerance of 10mm in the frame width. Your door frame will finish with a gap of nominal 5mm per side.

**FINELINE**  
S Y S T E M S